


# Operating Instructions For The UR5U-8400A Cable Remote Control

UR5U-8400A

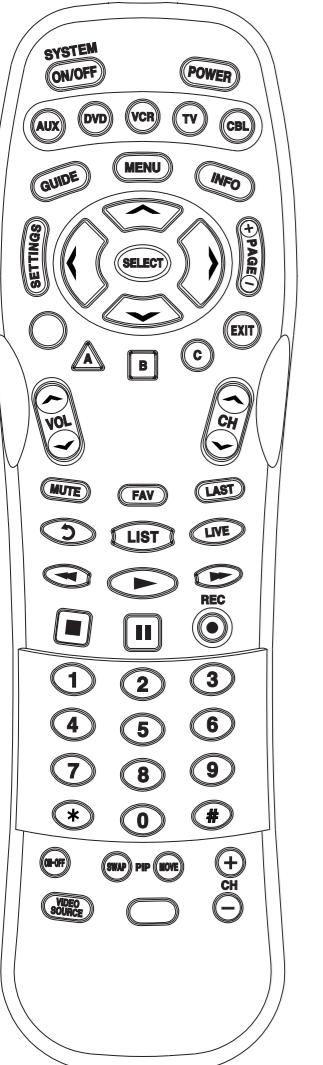

## 1 Introduction


The remote control is designed to operate the Scientific Atlanta Explorer 8000, Pioneer Voyager DVR and the Pace Micro DVR Series. You can also control the majority of TV, VCR, DVD and AUDIO equipment on the market as shown below.

CABLE : Cable Converters    TV : Televisions  
VCR : VCRs and TV/VCRs    DVD : DVD Players  
AUX : A/V Receivers, Tuners, DVRs, etc.

## 2 Replacing Batteries

Before you program or operate the remote control, you must install two new AA alkaline batteries.

- STEP1 Remove the battery compartment cover on the back of your remote control.
- STEP2 Check battery polarity carefully, and install the batteries as shown in the illustration below.
- STEP3 Replace the battery compartment cover.

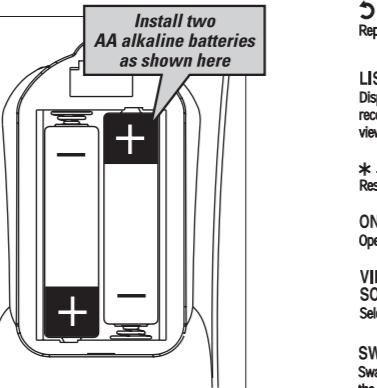

## 4 Operations

### Default State:

Device Default: CABLE

Volume Default: You have the option of controlling your TV volume and mute through the Cable box, VCR or DVD. Refer to section G for programming the volume and mute through your Cable box, VCR or DVD.

Channel Default: You have the option of controlling your CABLE channel and number keys through the TV or VCR. Refer to section F for programming the channel and number keys through your TV or VCR.

### System On/Off button:

This button is designed to send out power commands for two, three, four or all five devices with one button press. Please refer to section E for details.

## 5 Programming the Remote Control

### A. Three-Digit Code Programming Method.

The remote control can be programmed by pressing in a three-digit code number that corresponds to particular manufacturers and brands of Audio/Video equipment. The three-digit code numbers are listed in the code table of the instruction manual.


STEP1 Turn on the equipment you wish to program. (TV, VCR, DVD or AUX)

STEP2 Press the [DEVICE] button (TV, VCR, DVD or AUX) to be programmed and [SELECT] button simultaneously for 3 seconds. The device LED will turn on indicating the unit is ready to be programmed.

\*Tip: The device LED will turn on for 30 seconds. The next step must be entered while the LED is on.

STEP3 Point the remote control toward the equipment and enter the three-digit code number assigned to your brand from the code tables.

## 3 Button Functions

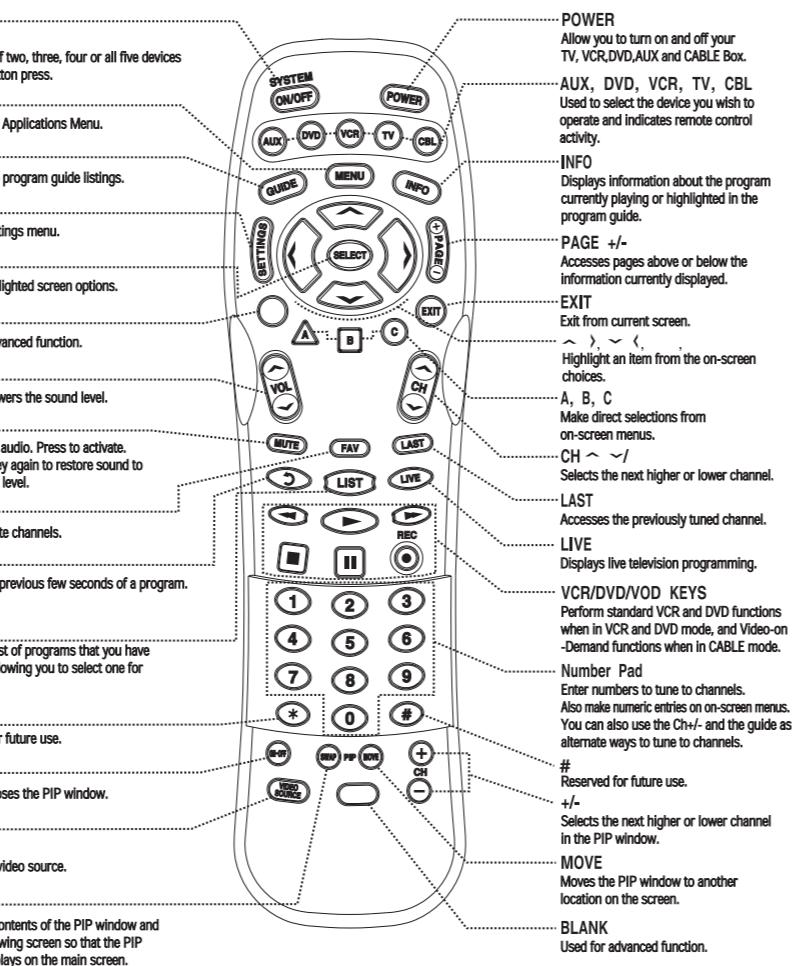

\*Tip: The equipment will turn off when the correct three-digit code number has been entered. You can verify you have selected the correct code by pressing the [POWER] button, the equipment should turn on or turn off.

STEP1 Press the [DEVICE] button (TV, VCR, DVD or AUX) you wish to verify and the [SELECT] button simultaneously for 3 seconds. The device LED will turn on.

\*Note: If there is more than one three-digit number listed for your brand, try one code number at a time until your equipment turns off.

\*Tip: The device LED will turn on for 30 seconds. The next step must be entered while the LED is on.

STEP4 Store the three-digit code number by pressing the same [DEVICE] button once again. The device LED will blink twice to confirm that the code has been stored.

\*Note: Try all the functions on the remote control. If any of the functions do not work as they should, repeat from Step 2 using the next three-digit code number from the same brand list.

Example: One blink, three blinks and eight blinks with an interval of 1 second of LED being turned off, indicates the code number 138.

Note: Ten blinks is equal to the number 0.

### B. Auto Search Method.

If the three-digit code numbers assigned to your brand do not turn off your equipment or the code tables do not list your brand, you can use the Auto Search Method to find the correct three-digit code number for your equipment by the following steps:

STEP1 Turn on the equipment you wish to operate.

STEP2 Press the [DEVICE] button (TV, VCR, DVD or AUX) to be programmed and the [SELECT] button simultaneously for 3 seconds. The [AUX] device LED will turn on.

\*Tip: The device LED will turn on for 30 seconds. The next step must be entered while the LED is on.

STEP3 Turn on the equipment you wish to operate.

STEP4 Press the [VIDEO SOURCE] button to pick up the TV code table.

STEP5 Point the remote control toward the equipment and enter the three-digit code number assigned to your TV brand from the code tables.

\*Tip: The device LED will turn on for 30 seconds. The next step must be entered while LED is on.

STEP6 Press the [CH+] or [CH-] button one at a time or keep it pressed. The remote will emit a series of power on/off commands. Release the [CH+] or [CH-] button as soon as the equipment turns off.

\*Tip: You can verify that you selected the correct code by pressing the [POWER] button. The equipment should either turn on or turn off.

STEP7 Press the same [DEVICE] button to store the code. The device LED will blink twice to confirm that the code has been stored.

C. To Find the Three Digit Code Number That was Stored in the Device.

STEP1 Press the [DEVICE] button and the [POWER] button you wish to store in the [SYSTEM ON/OFF] button and repeat this until you stored all the power commands into the [SYSTEM ON/OFF] button.

STEP2 Press the [CH+] button to save the power commands you stored. The [CBL] button will blink twice to confirm the saving.

### D. Programming a second TV to AUX Mode.

STEP1 Press the [AUX] button to be programmed and the [SELECT] button simultaneously for 3 seconds. The [AUX] device LED will turn on.

\*Tip: The device LED will turn on for 30 seconds. The next step must be entered while the LED is on.

STEP2 Press the [TV] device button to pick up the TV code table.

STEP3 Point the remote control toward the equipment and enter the three-digit code number assigned to your TV brand from the code tables.

\*Tip: Store the three-digit code number by pressing the [AUX] button once again. The device LED will blink twice to confirm that the code has been stored.

STEP4 Press the [CH+] or [CH-] button one at a time or keep it pressed. The remote will emit a series of power on/off commands. Release the [CH+] or [CH-] button as soon as the equipment turns off.

\*Tip: You can verify that you selected the correct code by pressing the [POWER] button. The equipment should either turn on or turn off.

STEP5 Press the same [DEVICE] button to store the code. The device LED will blink twice to confirm that the code has been stored.

STEP6 Press the [CBL] button and the [SELECT] button simultaneously for 3 seconds.

STEP7 Press the [CBL] button simultaneously for 3 seconds.

STEP8 Press the [CH+] button to save the power commands you stored. The [CBL] button will blink twice to confirm the saving.

### E. Programming the System On/Off Button.

The device LED will turn on for 30 seconds. The next step must be entered while the LED is on.

STEP1 Press the [CBL] button.

STEP2 Press the [BLANK] button and [SELECT] button simultaneously for 3 seconds.

The [CBL] device LED will turn on for 30 seconds.

STEP3 Press up to 10 buttons you wish to store. The [CBL] device LED will blink once for each command entered.

STEP4 Press the [CH+] button to store the functions that were selected. The [CBL] device LED will blink twice to confirm the storage of functions.

### F. Programming Channel Control.

If you wish to restore the TV volume control in CBL mode, repeat the above steps by pressing [CBL] in STEP3.

### G. Programming Volume Control.

By following the steps below, the user can program the volume controls (Volume Up, Volume Down and Mute) from one device to operate in another device mode. The default volume control settings on the remote control are as follows:

CBL : TV

VCR : TV

AUX : AUX

If you wish to store the CBL volume control in CBL mode, use the following steps.

STEP1 Press the [CBL] button and the [SELECT] button simultaneously for 3 seconds.

STEP2 Press the [CBL] button simultaneously for 3 seconds.

STEP3 Press the [CH+] button to save the power commands you stored. The [CBL] button will blink twice to confirm the saving.

### H. Programming For Advanced Function.

In the CBL mode, the BLANK button can be programmed to act as a macro or favorite channel button. You can send out up to ten commands with one button press.

STEP1 Press the [CBL] button to select the CBL mode.

STEP2 Press the [BLANK] button and [SELECT] button simultaneously for 3 seconds.

The [CBL] device LED will turn on.

STEP3 Press up to 10 buttons you wish to store. The [CBL] device LED will blink once for each command entered.

STEP4 Press the [CH+] button to store the functions that were selected. The [CBL] device LED will blink twice to confirm the storage of functions.

### I. Low Battery Warning.

When the batteries are low and need to be replaced with fresh batteries, the remote control LED will blink 2 times in sequence whenever a [POWER] button is pressed to turn on equipment.

### J. Memory Lock System.

This remote control is designed to retain programmed memory for 10 years even after batteries are removed from the remote control.

### K. Write your device Set-up codes.

TV Set-up Code Number:

VCR Set-up Code Number:

DVD Set-up Code Number:

AUX Set-up Code Number:

## 6 Set-up Code Tables

CABLE TV		
Remote	Converter	Code No
URSU-8400A	Scientific-Atlanta Explorer 8000, Pioneer Voyager DVR, Pace Micro DVR Series.	001
	Motorola DCT6208 Motorola DCT2XXX and DCT5XXX Series	004

TV		
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST	
ABEX	025	
ADMIRAL	072 081 161 160	
ADVENT	247	
ADVENTURA	002	
AIKO	103	
ALERON	028	
AKAI	197 146 248	
A MARK	112 143	
AMERICA ACTION	043	
AMPRO	167 073 157 183	
AMSTRAD	052	
ANAM	043 054 056 080 112 131	
AOC	197 004 112 058	
APEX DIGITAL	006	
AUDIOVOX	076	
BARCO	233	
BELCOR	116	
BELL&HOWELL	161 072	
BLAUPUNKT	088	
BRADFORD	043	
BROKSONIC	238	
BRICKWOOD	116	
CAIRN	201	
CANDLE	197 002 003 004	
CAPEHART	058	
CELEBRITY	070	
CENTURION	197	
CETRONIC	043	
CITIZEN	197 002 003 004 043 101 103 143	
CLARION	043	
CLASSIC	043	
CLP CLASSIC	161	
COLORTYME	116 197	
CONCIERGE	073 157 183	
CONCERTO	004	
CONTEC	043 050 051	
CORNEA	116	
CORONADO	143	
CRAIG	043 054	
CROSLEY	164	
CROWN	043 143	
CURTIS MATHERS	197 101 004 143	
CXC	043	
DAEWOO	004 016 043 044 076 103 114 125 127 143	
DAYTRON	004 143	
DELL	320 319 321	
DIMENSA	161	
DREAVISION	235	
DUKANE	163 025	
DUMONT	116 073 157 183	
DURABRAND	096	
DWIN	177 257	
DYNASTY	043	
DYNATECH	062	
EIKI	187	
ELECTROBAND	070	
ELECTROHOME	143 024 076 196	
ELEKTRA	072	
EMERSON	028 048 043 155 005 197 004 047 050 051 076 096 143 151 153 154	
ENVISION	116 197	
ESA	323	
FISHER	007 057	
FUJITSU	246 198 346	
FUNAI	028 043 052	
FUTURETECH	043	

VCR		
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST	
GATEWAY	242 268	
GE	160 144 165 073 197 008 009 034 056 074 130 155 161 004 157 183	
GIBRALTAR	116 073 157 183	
GOLDSTAR	113 116 102 004 106 112 119 127 143	
GRUNBY	028 043	
HALL MARK	004	
HARLEY DAVIDSON	028	
HARVARD	043	
HAVERMY	081	
HELLO KITTY	076	
HIMITSU	043	
HITACHI	011 163 166 004 009 010 012 023 075 143 158 072	
HP	378 316 327	
INFINITY	164	
INFOCUS	333 230 330	
INTEQ	073 157 183	
INSIGNIA	350	
JANEIL	002	
JBL	164	
JCB	070	
JCPENNEY	004 024 197 008 009 030 065 101 143 160	
JENSEN	013	
JVC	038 034 070 083 145 199 210 240 241	
KAWASHO	116 070 197	
KEC	043	
KENWOOD	197 070	
KLOSS	002 059	
KLOSS NOVABEAM	002	
KMC	143	
KTV	043 197 143 154	
KURAZAI	072	
LG	363 113 116 102 004 106 112 119 127 143 243 284	
LODGENET	072	
LOEWE	164	
LOGIK	072	
LUXMAN	004	
LXI	166 007 015 052 081 160 164	
MAGNAVOX	164 059 197 003 060 061 004 063 064 127 022 160 094 239 226	
MAJESTIC	161 072	
MARANTZ	197 164 184	
MATSUI	164	
MATSUSHITA	080	
MAXENT	242	
MEGATRON	116 197 163	
MEMOREX	007 072 004	
METZ	088	
MGA	197 004 024 028 042 042 042 042 146 191	
MIDLAND	161 073 157 183	
MINERVA	088	
MINUTZ	008	
MITSUBISHI	124 109 024 004 028 040 042 146 191	
MONTGOMERY WARD	161 072	
MOTOROLA	081	
MTC	197 004 062 101	
MULTITECH	043	
NAD	015 025	
NEC	272 132 130 134 197 040 016 024 056 019 236 237 262	
NET-TV	202	
NIKEI	043	
NIKKO	116 197	
NTC	103	
NUVISION	351	
ONKING	043	
ONWA	043	
OPTIMUS	025	
OPTONICA	019 081	
OPTOMA	265 270	
ORION	096	
PANASONIC	080 034 056 092 164 208	
PHILCO	197 003 059 060 064 164 004 024 056 063	
PHILIPS	164 005 093 038 197 003 004 059 127 184 206 239 259	
PILOT	116	
PIONEER	234 135 025 197 018 023 116 190	
POLAROID	388	
PORTLAND	004 143	
PRISM	043	
PROSCAN	034 161	

VCR		
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST	
AKAI	144 160 161 165 167	
PROTON	004 131 058 143 171 173 193	
PULSAR	116 073 157 183	
QUASAR	034 056 092	
RADIO SHACK	019 004 143 043 127	
RCA	333 160 165 065 144 161 197 004 024 056 152 023 074	
REALISTIC	007 019 043 047	
ROCTEC	186	
HARVARD	043	
HAVERMY	081	
HELLO KITTY	076	
HIMITSU	043	
HITACHI	011 163 166 004 009 010 012 023 075 143 158 072	
HP	378 316 327	
INFINITY	164	
INFOCUS	333 230 330	
INTEQ	073 157 183	
INSIGNIA	350	
JANEIL	002	
JBL	164	
JCB	070	
JCPENNEY	004 024 197 008 009 030 065 101 143 160	
JENSEN	013	
JVC	038 034 070 083 145 199 210 240 241	
KAWASHO	116 070 197	
KEC	043	
KENWOOD	197 070	
KLOSS	002 059	
KLOSS NOVABEAM	002	
KMC	143	
KTV	043 197 143 154	
KURAZAI	072	
LG	363 113 116 102 004 106 112 119 127 143 243 284	
LODGENET	072	
LOEWE	164	
LOGIK	072	
LUXMAN	004	
LXI	166 007 015 052 081 160 164	
MAGNAVOX	164 059 197 003 060 064 164 004 024 056 063	
MAJESTIC	161 072	
MARANTZ	197 164 184	
MATSUI	164	
MATSUSHITA	080 009	
MAXENT	242	
MEGATRON	116 197 163	
MEMOREX	007 072 004 028 040 042 042 042 146 191	
MGA	045 046 059	
MGN TECHNOLOGY	040	
MINOLTA	013 020	
MITSUBISHI	059 061 151 013 020 045 046 051 049 168	
MOTOROLA	031 053	
MTC	034 040	
MULTITECH	024 034	
NAD	015 025	
NEC	012 023 039 043 048	
NIKKO	101	
NOBLEX	040	
NORDMENDE	043	
OLYMPUS	031	
OPTIMUS	101	
OPTONICA	053 054	
ORION	096	
PANASONIC	080 034 056 092 164 208	
PHILIPS	197 003 059 060 064 164 004 024 056 063	
PHILIPS	164 005 093 038 197 003 004 059 127 184 206 239 259	
PILOT	116	
PIONEER	234 135 025 197 018 023 116 190	
POLAROID	388	
PORTLAND	004 14	